

## Overview

The Intercomp Digital Depth Gauge gives accurate and reliable tire tread depth information. Typically measurements are taken across the width of the tire. The “5” (shown below in the lower right corner) indicates the .0005”. For example, the measurement displayed on the gauge below is -0.2225 inches. If the “5” were not indicated, the measurement would be -0.2220 inches.



## Features

- High Accuracy: measures depth in 0.0005” and 0.01 mm increments
- Depth range of 0-0.3” / 0-7.62mm
- Zero Accuracy of +/- .001
- Billet Aluminum Base Construction
- Four Point CAD/CAM Design
- Large 1/2 inch Digital Display
- Plastic Case with Foam insert

## Controls

### OFF/ON

Press button to turn gauge on and off.

### inch/mm

Press button to toggle between inches or millimeters.

### ZERO

Press ZERO to set the zero point (desired reference point).

## Operation

1. Press OFF/ON to turn on the gauge.
2. Place the gauge on the tire and press the ZERO button.
3. Place the gauge over the reference hole of the tire and the depth reading is displayed.